

IMPORTANT: PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE !



2005-11 Ford Mustang 2 Piece ABS EGX Rear Window Louver Kit



Part #: Complete 5049-3400-05



TOOLS REQUIRED

Glass cleaner, grease pencil, adhesive promoter, clean soft rags.



INSTALLATION TIP: E&G Classics highly recommends the use of an adhesion promoter, such as PRO BOND, in any application when applying 3M tape.

2

1. Place the **louvers** onto a clean, flat work area. Temporarily install the **mounting brackets** (two (2) flat ones at the bottom). Then install the remaining five (5) **bent brackets** around the perimeter. Then install the supplied **1/8" x 1/4" foam tape** to the inside surface (where shown with white lines) breaking at the mounting brackets.
2. Apply the **.045" x 3/4" 3M double-sided tape** on the upper edge of lower half of the **louver set** as shown.



4

3. Thoroughly clean the rear window on the vehicle.
4. Once the mounting brackets have been removed, align the louvers over the rear glass. **Please pay close attention to the alignment since this set consists of two individual louver sections. The louvers should be pushed as forward as possible on the upper glass area.**




5. Lift up the sides of the louvers and insert the five (5) bent mounting brackets (1 per side & 3 along the top) making sure that the bent edges are facing outwards and the mounting studs are protruding through the existing holes in the louvers.



6. Once the five (5) bent brackets are in place, mark their locations with a grease pencil.
7. Remove the two sections of louvers and mounting brackets.
8. Take the five (5) **bent brackets** and remove the red 3M tape backing. Align the **brackets** to the markings made in Step #6 and press firmly into place.



9. Place only the lower section of the louver on the rear glass over the previously installed lower brackets.
10. Remove the backing from the red 3M tape on the two flat brackets with the 1/2" studs. **Important: These are the only flat brackets that have 1/2" studs.**
11. Place the stud through the upper hole & press the bracket down firmly to the glass.

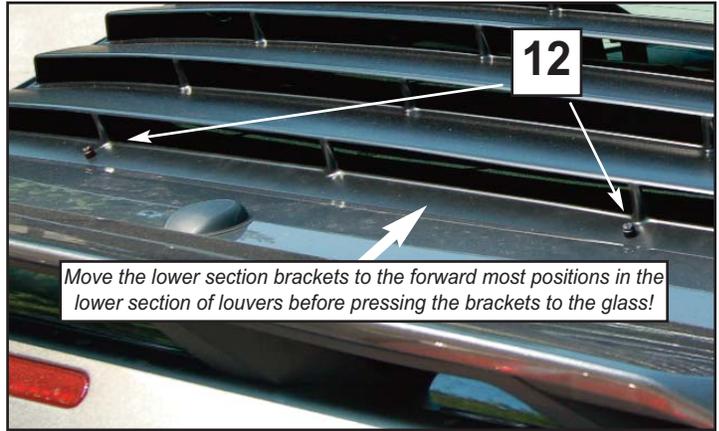

Move the lower section brackets to the forward most positions in the lower section of louvers before pressing the brackets to the glass!

12. Repeat Step #10 with the two lower section flat brackets (3/8" studs) that are located just above the trunk (**ensure that the bracket/stud location is in the most forward location away from the deck lid before pressing the brackets to the glass.**)



13. Remove the lower section of the louver.
14. Place the top section of the louver in place ensuring that all studs protrude through the mounting holes.
15. Remove the backing from the 3M tape on the lower section of the louvers that was attached in Step #2. Align the lower section to the mounted brackets and press the upper and the lower together.



16. Secure the louvers using the supplied nylon thumb nuts.
17. Finished installation.

Part #5049-3400-05		
Quantity:	Description:	Part Number:
1	Upper Louver Section	5049-340A-05
1	Lower Louver Section	5049-340B-05
1	Installation Hardware Kit	5049-3402-05
9	Nylon Thumb Nuts	1999-0387-00
3	15' Rolls of 1/8" x 1/4" Foam Tape	3999-9137-00
2	Flat Brackets 3/8" Studs	5049-3411-05
2	Flat Brackets 1/2" Studs	5049-3412-05
5	Univ. Bent Brackets 3/8" Studs	5388-3412-08
5'	.045" x 3/4" Double Faced Tape	3004-9247-92

MADE IN



AMERICA



2005-11 FORD MUSTANG EGX 2 PC REAR WINDOW LOUVER KIT