

IMPORTANT: PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE



2000-05 Cadillac DeVille DHS Classic, Classic 3D "Z", Classic Billet & Classic Mesh Grille Installation Instructions H 25 G4R

SILVER #1986-0101-00R GOLD #1986-0121-00R

<u>Quantity</u>	<u>Description</u>	<u>Part No.</u>
1	DeVille L/P Grille Frame	1986-0141-00R
	Includes: 41" of Black Edge Guard	1999-0095-00
1	DeVille L/P Verticle - Gold	1986-0148-00R
	or Silver	1986-0146-00R
1	Hardware Kit (components listed below)	1986-1902-00R
4	1/4" Lock Washers	1999-1950-00
4	1/4" Flat Washers	1999-1951-00
4	M6 x 1.0 x 25 Hex Bolts (Metric)	1999-0068-00
4	18880 3.0 Zinc U-Nuts (Metric)	1999-0069-00
3	3/8" Hex Speed Nuts (3/16" Stud Size)	3999-9589-00

SILVER BILLET #1986-0160-00R GOLD BILLET #1986-0260-00R

<u>Quantity</u>	<u>Description</u>	<u>Part No.</u>
1	DeVille L/P Grille Frame	1986-0141-00R
	Includes: 41" of Black Edge Guard	1999-0095-00
1	DeVille L/P Verticle - Gold	1986-0261-00R
	or Silver	1986-0161-00R
1	Hardware Kit (components listed below)	1986-1902-00R
4	1/4" Lock Washers	1999-1950-00
4	1/4" Flat Washers	1999-1951-00
4	M6 x 1.0 x 25 Hex Bolts (Metric)	1999-0068-00
4	18880 3.0 Zinc U-Nuts (Metric)	1999-0069-00
3	3/8" Hex Speed Nuts (3/16" Stud Size)	3999-9589-00

CLASSIC 3D "Z" #1986-0200-00

<u>Quantity</u>	<u>Description</u>	<u>Part No.</u>
1	DeVille L/P Grille Frame	1986-0141-00R
	Includes: 41" of Black Edge Guard	1999-0095-00
1	DeVille L/P Classic 3D "Z" Insert	1986-0201-00
	Includes: Stainless Steel Exterior Insert	1986-0203-00
	Stainless Steel Interior Insert	1986-0042-00
	Bottom Retaining Bracket	1986-0042-00
1	Hardware Kit (components listed below)	1986-1902-00R
4	1/4" Lock Washers	1999-1950-00
4	1/4" Flat Washers	1999-1951-00
4	M6 x 1.0 x 25 Hex Bolts (Metric)	1999-0068-00
4	18880 3.0 Zinc U-Nuts (Metric)	1999-0069-00
3	3/8" Hex Speed Nuts (3/16" Stud Size)	3999-9589-00

**THESE GRILLES MUST NOT BE INSTALLED ON
"NIGHT VISION" EQUIPPED CARS.**

WARRANTY INFORMATION:

E&G Classics, Inc. warrants its chrome parts and products to be free from defects in material, workmanship or finish for Forty-Eight (48) months or 50,000 miles from the date of installation by E&G or an authorized installation facility. This warranty is limited to the repair or replacement, at E&G Classics option, of the defective part or product.

To obtain performance under this warranty you must:


- 1.) Present your E&G unit to an authorized distributor in your area with proof of purchase.
- 2.) If no distributor is available, contact E&G Classics (address below) for authorization to return unit.
- 3.) Returns - All unauthorized returns will be refused. Merchandise approved by E&G for return must have been purchased within the Twenty-Four (24) months. All returns require an authorization number obtained from E&G and the actual return must be accompanied by the written authorization form filled out completely. All merchandise must be inspected upon receipt and shortages reported within 48 hours. All merchandise must be in a resalable condition. Merchandise must be packed carefully in the original packing. If original packing is no longer usable, repack item(s) comparable to original manner. All returns are subject to a 25% handling charge. Special order items are not returnable. Defective merchandise must have an explanation of the problem. No credit will be issued unless invoice number and date of purchase has been supplied. Manufacturer shall be sole judge of defects in a product.
- 4.) UPS accounts - All returns must be prepaid. Do not send return shipments freight collect. Once E&G has made its decision and it is a claim against our warranty policy, E&G will credit incoming freight on damaged parts.
- 5.) No discontinued part or parts changed due to body style are returnable.

You are responsible for inspecting all packages containing E&G Classics' parts and product immediately upon their receipt and must file a claim with the carrier for any damage disclosure by such inspection and notify E&G classics in writing at the above address of any such damage. This warranty does not extend to any of our products which have been subject to misuse, neglect, accident or have been altered or repaired in any way. This warranty does not cover any accidental or consequential damages for any breach of this warranty agreement. E&G Classics shall have no responsibility for any loss of time, inconvenience, commercial loss or consequential damage, nor shall E&G be liable for any injury or damage to persons or property by reason of any defect in material, workmanship or finish of its parts or products. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

CLASSIC MESH #1986-0102-00

<u>Quantity</u>	<u>Description</u>	<u>Part No.</u>
1	DeVille L/P Grille Frame	1986-0141-00R
	Includes: 41" of Black Edge Guard	1999-0095-00
1	DeVille L/P Mesh Section	1986-0100-00
	Includes: Mesh Insert	1986-0020-00
	Bottom Retaining Bracket	1986-0042-00
1	Hardware Kit (components listed below)	1986-1902-00R
4	1/4" Lock Washers	1999-1950-00
4	1/4" Flat Washers	1999-1951-00
4	M6 x 1.0 x 25 Hex Bolts (Metric)	1999-0068-00
4	18880 3.0 Zinc U-Nuts (Metric)	1999-0069-00
3	3/8" Hex Speed Nuts (3/16" Stud Size)	3999-9589-00
1	Wreath & Crest Mounting Plate	1986-0158-00
1	Mounting Plate Washer	1986-0156-00
2	8-32 ESNA Half Lock Nuts	1999-0065-00
1	Deville Hood Ornament Base Filler	1986-0154-00


1. Remove two (2) 10mm hex nuts and two (2) 10mm hex head bolts from the grille side support rods and remove the support rods (not shown).
2. Remove six (6) 10mm hex nuts from the inside top of the grille and surround and pull the factory grille straight out.
3. Using a small grinder, remove the locking tabs from the grille insert.
4. Once the locking tabs are ground off, pry the insert straight out.
5. Reinstall the factory grille surround back onto the hood (two 10mm hex nuts each side and the support rods with 10mm hex nuts and bolts).
6. Use a 3/16" drill bit to enlarge the slots in the factory grille surround (where shown). Drill from the inside out to limit possible damage with the drill chuck.
7. On all light colored cars, use a scotch brite pad to scuff the return and rear surfaces of the factory surround. Tape up the surface of the factory surround and hood and paint the edges semigloss black. Allow the paint to dry.
8. Align the E&G grille onto the car and install the 1/4" flat washers, 1/4" lock washers and 6mm x 25mm hex bolts through the holes in the hood and into the 6mm U-nuts mounted on the grille brackets (hand tighten).
9. Install a 3/16" speed nut onto each stud that has passed through the lower factory grille surround.
10. Make sure that the E&G grille is perfectly centered and tighten all mounting hardware. Do not over-tighten the 3/16" speed nuts on the lower studs or you will strip the aluminum studs.

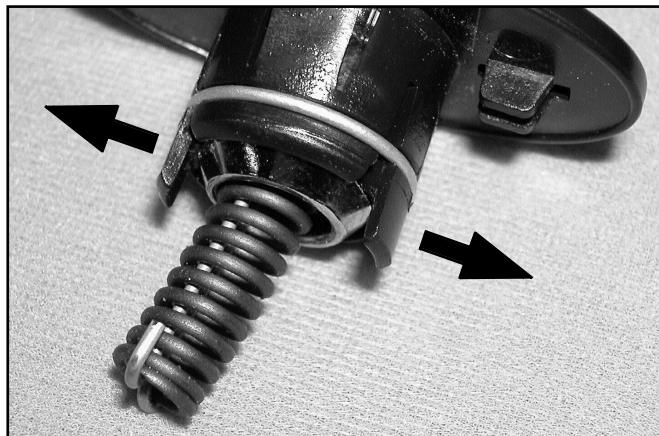

11. Installing the Classic Mesh Grilles on DeVilles with hood ornaments: This close-up shows the plastic tabs that need to be pushed out to release the hood ornament from the base (removed from the hood for clarity, do not remove base from hood).



12. Open the hood and push out on the plastic retaining clips to release the hood ornament from the base.

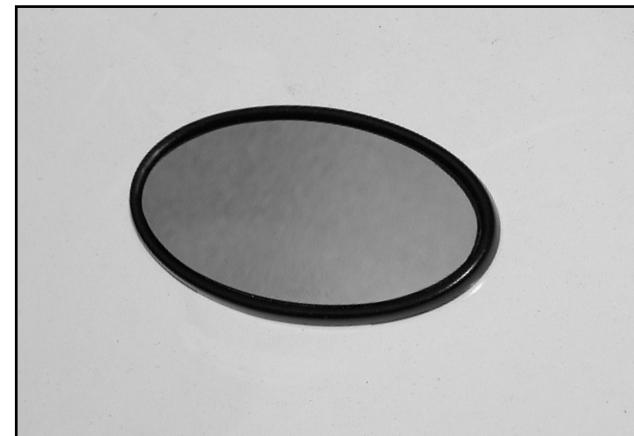

11. Use double faced tape to secure the emblem filler plate to the hood ornament base to finish.