



# TOOLBOX MODEL INSTRUCTIONS

(This cover fits most 20" to 21" over the rail tool boxes)

## READ THIS BEFORE STARTING INSTALLATION

### REMEMBER TO USE PROTECTIVE EYEWEAR


**STEP 1 - Set toolbox 20" from front of pickup box header.** (See illustration 1) Use weather seal to seal gap at front between toolbox and pickup box header. NOTE: If gap is too large for weather seal, use alternative filler sources (not supplied with kit).

**STEP 2 -** (See illustration 2)  
**a)** Place toolbox header bar tight against wall of toolbox.  
**b)** Flush with top of pickup box. Apply pressure to compress rubber seal against toolbox, hold and clamp tight with clamps in two pack. Note: Save 6 or 8 pack clamp package for cover rails.


**STEP 3 -** Peel backing off from "L" weather seal and adhere seal to edge of header bar from end to end. (See illustration 2)

**STEP 4 - Set side rail in place, so the front edge of side rail is even with edge of header bar.** (See illustration 2 & 3) If rail is 1/4" from tailgate, but overlaps the header bar at front, cover will still fit.


**Installation tip: For best protection, use silicon seal at front of rail and header bar along side of box (not supplied with kit).**

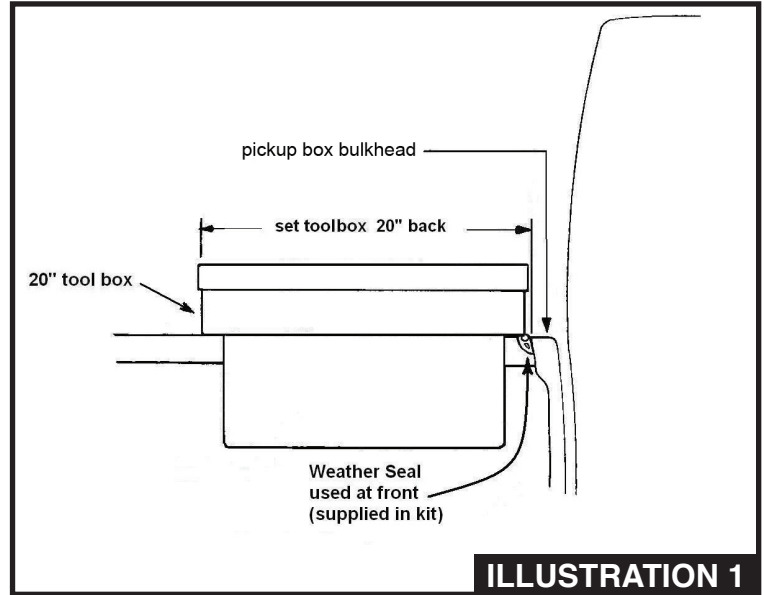

**ILLUSTRATION 1**

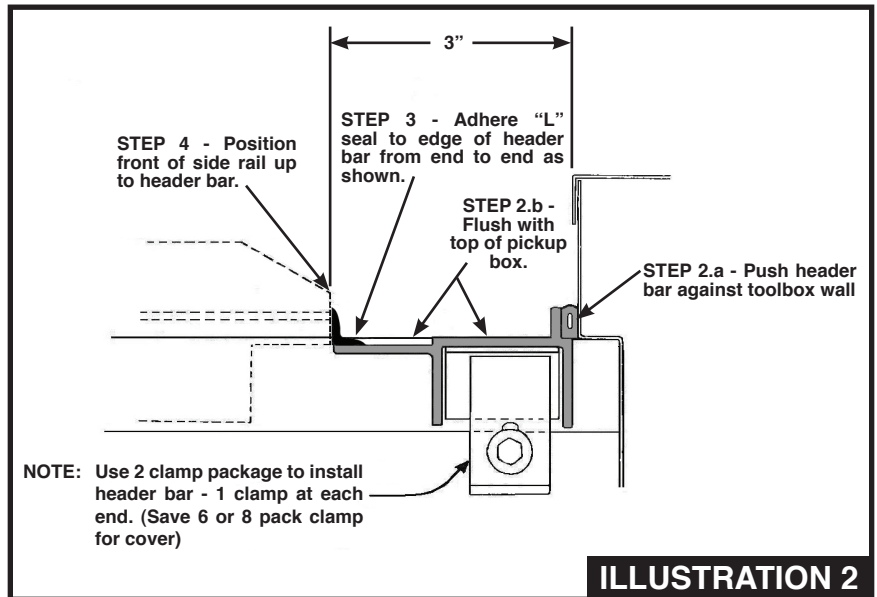

**ILLUSTRATION 2**

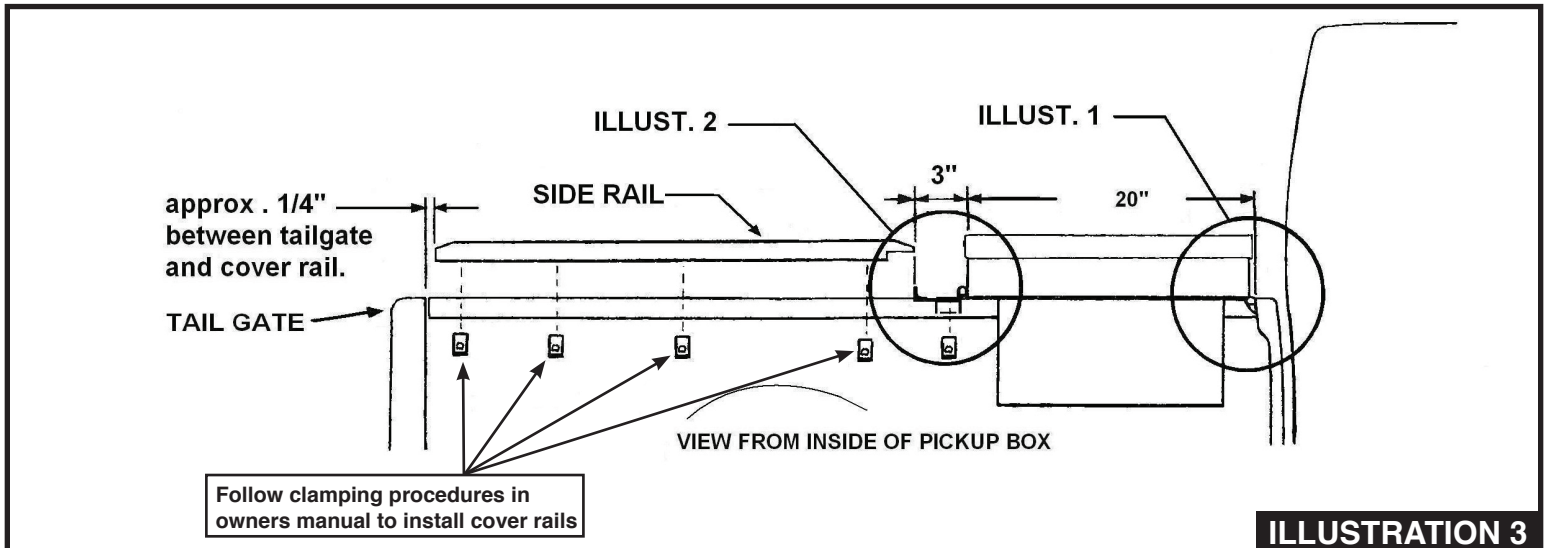

**ILLUSTRATION 3**